



Use Flexible pipe to Connect MPV and Ejector As shown by Dotted Line -----

Support Ejector from Top pipe or independently —————

